



**Australian Government**

# **RIIHAN308D Load and unload plant**

**Release: 3**

## RIIHAN308D Load and unload plant

### Modification History

Release	Comment
1	This unit replaces RIIHAN308A Load and unload plant.
2	Editorial corrections.
3	Amended Application field. Required frequency and volume of evidence amended in Performance evidence. Substantial amendments made in Assessment Conditions field, including: references to Industry Sectors, assessor and subject matter expert experience requirements, how assessment should be conducted and what it should confirm.

### Application

Load and unload plant in the Resources and Infrastructure Industries.

This unit is appropriate for those working in operational roles.

Licensing, legislative, regulatory and certification requirements that apply to this unit can vary between states, territories and industry sectors. Relevant information must be sourced prior to application of the unit.

## Elements and Performance Criteria

<p>1. Plan and prepare to load and unload plant</p>	<p>1.1 Access, interpret and apply load handling documentation and ensure compliance the work activity is compliant</p> <p>1.2 Obtain, read, interpret, clarify and confirm work requirements</p> <p>1.3 Identify and address potential risks, hazards and environmental issues, and implement control measures</p> <p>1.4 Select and wear personal protective equipment appropriate for work activities</p> <p>1.5 Identify, obtain and implement signage and barriers and ensure the loading/unloading site is made safe and isolated from general traffic flow</p>
<p>2. Load the plant</p>	<p>2.1 Confirm the dimensions and capacity of the float/trailer to safely carry the plant item</p> <p>2.2 Select tools and loading equipment, check for serviceability/faults and rectify or report, verbally or in writing, prior to commencement</p> <p>2.3 Confirm preparation of the plant for transportation has been completed</p> <p>2.4 Place and secure loading aids</p> <p>2.5 Confirm loading procedure with operator and/or guide before loading commences</p> <p>2.6 Move the plant item onto the trailer/float and halt at the designated position</p>
<p>3. Unload the plant</p>	<p>3.1 Confirm the unloading procedure with operator and/or guide before unloading commences</p> <p>3.2 Place and secure unloading aids, including ramps, in accordance with the trailer/float specifications</p> <p>3.3 Slacken securing devices and remove in a sequence which optimises safety</p> <p>3.4 Move the plant item off the trailer/float and halt at the designated position</p> <p>3.5 Stow loading aids including ramps, bridging materials and securing devices</p>

## **Foundation Skills**

Foundation skills essential to performance are explicit in the performance criteria of this unit. Further information is available in the Resources and Infrastructure Industry Training Package Companion Volume.

## **Unit Mapping Information**

RIIHAN308A Load and unload plant

## **Links**

SkillsDMC RII Companion Volumes - <http://www.skillsdmc.com.au/>